


## Epson BrightLink 695wi Interactive Projector Instructions


Center for the Arts 018, 020, 021, 129, Harman 119, Humanities 104, 204, Myrick 114,  
Stephens 113, 212, Strong 113, 115, 116, 119, UMOM 309, Wills 101, 121, G2

### Onscreen Projector Menus

**Interactive Control Menu** – right or left side of screen  
Used to choose PC Interactive Mode or Annotation Mode.

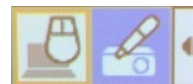


**Projector Menu** - bottom of screen  
Do not make any changes to this menu. These features should be controlled from the lectern control panel.

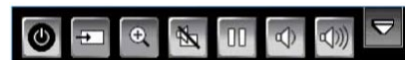

### Using the Interactive Pens

There are two interactive pens to use with the projector. The pens are identified by the color on each pen. You can use both pens at the same time. The pens do have rechargeable “Eneloop” batteries that will need to be charged periodically using the white Panasonic battery charger located at the lectern or in an outlet close to the lectern.

**Note:** The pen turns off automatically after 20 minutes of inactivity. Tap the pen tip or press the button on the side to turn the pen back on.

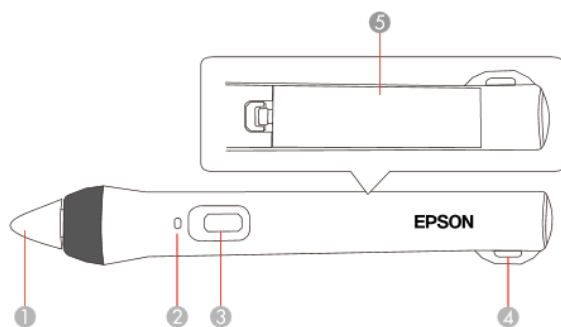


- 1 Pen tip
- 2 Battery light
- 3 Power/function button
- 4 Attachment for optional strap or cord
- 5 Battery cover

- To turn on the pen, tap the pen tip or press the power/function button.

**Note:** If you press the button, the battery light flashes briefly, then turns off. If the battery is low, the battery light flashes continuously.

- For best performance, hold the pen perpendicular to the board, as shown below. Do not cover the black section near the tip of the pen.

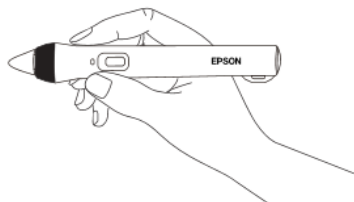

## Interactive Features



### PC Interactive Mode




2. Control the teaching station computer and/or programs using the actions below.
3. This mode will ONLY control the teaching station computer. All other projector inputs (document camera, Blu-ray, laptop) must be controlled by their menus and remotes.






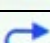 
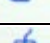 











Interactive Pen	Finger Touch
<b>Left click</b> – tap the board once.	<b>Left click</b> – tap the board once.
<b>Double click</b> – tap the board twice.	<b>Double click</b> – tap the board twice.
<b>Right click</b> – press the power button on the pen and tap the board at the same time.	<b>Right click</b> – press finger to board and hold for about 3 seconds.
<b>Click and drag</b> – tap board and drag with pen.	<b>Click and drag</b> – press board and drag with finger.
<b>Move cursor</b> - hover over board without touching it.	<b>Move cursor</b> - hover over board without touching it.
	<b>Scroll</b> – drag finger on the screen.

### Annotation Mode



2. There are two annotation modes with very similar menus. Click the appropriate icon at the top of the menu bar to switch between modes.
  - a. **PC Annotation Mode**  – Allows you to annotate over any projected image (PC, Doc Cam, DVD, Laptop, etc.) using pens or fingers.



PC Annotation Menu	Icons		Whiteboard Annotation Menu
		Switch to PC annotation mode	
		Switch to whiteboard annotation mode	
		Undo the <u>last</u> annotation	
		Redo the <u>last</u> annotation	
		<i>PC Annotation mode only:</i> Pen or finger will function as a mouse to control computer	
		<i>Whiteboard mode only:</i> Choose background color and pattern	
		Choose and write with custom pen color and width	
		Choose color and write with highlighter	
		Black pen (fine and thick point)	
		Red pen (fine and thick point)	
		Blue pen (fine and thick point)	
		Eraser (fine and thick point)	
		Clear all annotations	
		Current pen colors for pens and finger. Pens are distinguished by a blue or orange pen top.	
		Hide toolbar after each annotation	
		Close toolbar	